



Clickbox User Manual

Please Note: Relay 1 is the show programming master for a show, the length of the programming time for relay 1 equals the length of the show.

To program the unit:

Relay 1

Press and hold in the show record button then relay 1's button, the status led will flash red. Once it has stopped flashing and is a solid red the unit will start to record the action of relay 1's button and will record it until the show record button is released. So if relay 1's button is pressed this will turn on relay 1, when released it will turn off relay 1. Once you have finished your show release the record button, the show will then be saved and the red led will turn off and the green led will come on.

Relay 2

As before, press and hold the record button but this time used relays 2's button in the same way as above. As relay 1 sets the length of the show, the red led will start to flash 5 seconds before the end of the show.

Out Trigger

Treat this in the same way as relay 2.



Relays 1 & 2

Pressing and holding both relay 1 and relay 2's buttons while pressing and holding in the record button will allow you to record both relay 1 and 2 at the same time. When led status light is green there is a show programmed into the Clickbox. When the Clickbox is running a show the green status led will start to flash once a second. When a show has been programmed into the Clickbox the status led will flash orange, red then green at power-up.

Erase Individual Clickbox Channels:

If you wish to only remove one part of the show. (For example, relay 2, when the Clickbox is switched on hold down relay 2 this will delete that relay from the show). You can record over any section of the show you have if you wish to do so (Fox example, if you want to change how relay 2 is performing hold down the record button and press relay 2 how you want it to run in the show).

Erase ALL Clickbox channels

If you decide to delete the whole show and start again you will need to hold down the record button when the Clickbox is being switched on, the LED status light will switch from green to flashing red once a second once the show has been deleted.

Locking the Clickbox

To put the Clickbox into safe mode so you cannot edit it you must hold down relay 1 button, relay 2 button and output trigger button at the same time when you switch the Clickbox on. Once you have done that you will have 10 seconds to press the record button four times to put the Clickbox in safe mode.

Unlocking the Clickbox

To get the Clickbox out of safe mode you must hold down relay 1 button, relay 2 button and output trigger button at the same time when you switch the Clickbox on. Once you have done that you will have 10 seconds to press the record button four times to get the Clickbox out of safe mode.

Status LED meanings

- Flashing red once a second - Unit is un-programmed.
- Still green - Show is programmed but not running.
- Flashing green - Show is running.
- Flashes orange, red then green - There is a show already on the Clickbox and still editable.
- Still green when Clickbox switched on - The Clickbox is in safe mode.