




## CLAUSTROPHOBIA WALL FITTING INSTRUCTIONS

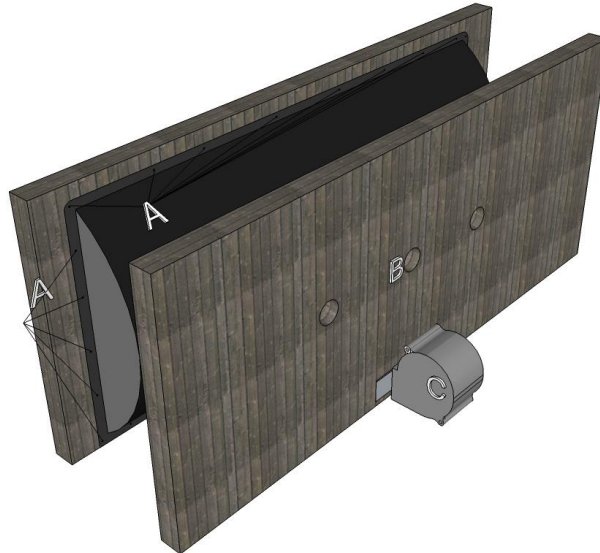

1. The claustrophobia wall is designed to be fitted on standard 8ft high panels. The bottom of the curtain should be hung 1ft off the floor to prevent trips or falls by users.
2. We recommend that the wall panels are placed so there is a gap between them of 1200mm to 1300mm to allow the curtains to reach each other when inflated.
3. As can be seen in the diagram above (A), using the washers provided, each curtain should be fitted to the wall firstly by screwing in each corner. Then we recommend that a screw and washer be fitted at approximately 1ft increments along the curtain edge. (Please note that the curtain is rip stop nylon material and so will not rip or tear when it is fitted or removed.)
4. The gaps between the screws will allow excess air to disperse when people pass through the curtains. If you require more air to be dispersed, holes can be made in the wall panels (see B in the diagram above).
5. The fan (marked C on the diagram above) has three speed settings. By changing the speed setting, you can adjust the firmness of the curtains. A higher speed will mean the curtains are firmer when inflated, a lower speed will mean the curtains are softer. Curtain firmness can also be adjusted by adding holes in the panels (B on the diagram) or adding more fixings to the wall (A on the diagram).

Should you have any further queries, please call us on 01243 837835 or email us at [info@fearfx.co.uk](mailto:info@fearfx.co.uk).